


Under sink water filtration kit installation instructions

- The kit has been designed for simple installation
- There is no need to cut any pipe work
- The kit is suitable for standard **12mm to 15mm copper pipe**



To filter (plastic connector)


Figure 1

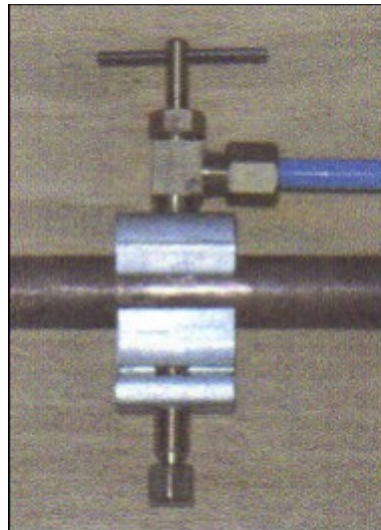

To filter - inlet side

Figure 2

1. Select the position of the tap on your counter or sink unit and drill a **12mm** hole.
2. Insert the tail of the pipe through the hole and secure using the locking nut and washers provided.
3. Connect the tap to the pipe. Make sure you have the white plastic insert and white plastic olive (figure 1). Tighten the nut connecting the pipe as tight as it will go (about 3 full turns).
4. Fit the bracket to the filter housing with the screws provided.
5. Fix the housing to your kitchen cabinet using the 2 screws provided.
6. Connect the saddle valve to the cold water pipe. Make sure the clamp is tightened securely. **Do not turn the piercing T bar whilst securing the clamp** (figure 2).
7. Turn the T bar on the saddle clamp until the pipe is pierced. Once pierced, turn the T bar back a few turns to allow water to flow.
8. Check for leaks – if you find any then fittings need to be tightened.
9. Open the ball valve and then the tap. The water will initially run black. Allow approximately a sink full of water to run (~10 litres) through the system before using it.

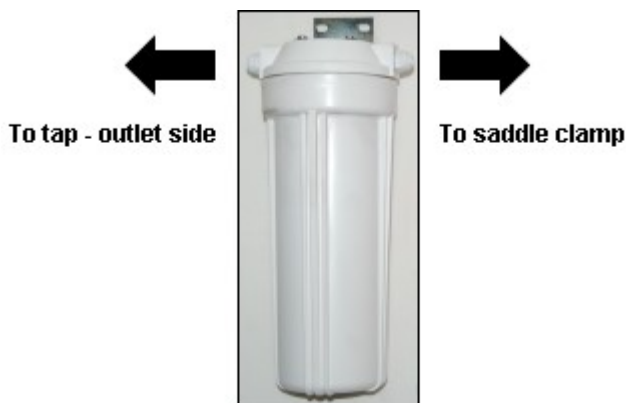

To tap - outlet side

To saddle clamp